

描述 Description	尺寸 Contour	描述 Description	尺寸 Contour
GXB2-BA3 平钮头部	Flush button head	GXB2-BB4 蘑菇钮头部 弹簧返回 自复型	Mushroom Head Spring Return Momentary
GXB2-BL3 凸钮头部	Extended button head	GXB2-BC4 蘑菇钮头部 弹簧返回 自复型	Mushroom Head Spring Return Momentary
GXB2-BP5 平钮头部 (带防水罩)	Flush button head (with water-proof cover)	GXB2-BR4 蘑菇钮头部 弹簧返回 自复型	Mushroom Head Spring Return Momentary
GXB2-BA336 平钮头部 (带符号)	Flush button head marked	GXB2-BS44 蘑菇头型 急停钮头部 旋转释放	Mushroom Head Twist Release
GXB2-BL331 凸钮头部 (带符号)	Extended button head marked	GXB2-BS54 蘑菇头型 急停钮头部 旋转释放	Mushroom Head Twist Release
GXB2-BW33 灯钮头部 采用高透光率 护盖	Pilot light head with higher transparent protecting cover	GXB2-BS64 蘑菇头型 急停钮头部 旋转释放	Mushroom Head Twist Release
GXB2-BV04 指示灯头部	Pilot light head	GXB2-BT4 蘑菇头型 急停钮头部 拉拔释放	Mushroom head Push-Pull
GXB2-BK23 带灯旋钮头部 二位置自锁	Selector switch head with lamp 2-position Maintained	GXB2-BS14 钥匙急停头部 钥匙旋转释放	Mushroom head return to release by key
GXB2-BK33 带灯旋钮头部 三位置自锁	Selector switch head with lamp 3-position Maintained	GXB2-BA8134H 绿键(平头型) 红键(平头型) (带防水罩)	Green button (Flush) Red button (Flush) IP40 (Waterproof cover)IP65
GXB2-BD2 短柄旋钮头部	Selector Switch Short-handle	GXB2-BL8334H 绿键(平头型) 红键(凸头型) (带防水罩)	Green button (Flush) Red button (Extended) IP40 (Waterproof cover)IP65
GXB2-BJ2 长柄旋钮头部	Selector Switch long-handle	GXB2-BW83 绿键(平头型) 红键(平头型) (带防水罩)	Green button (Flush) Red button (Flush) IP40 (Waterproof cover)IP65
GXB2-BG2 钥匙钮头部	Key-operated	GXB2-BW84 绿键(凸头型) 红键(凸头型) (带防水罩)	Green button (Flush) Red button (Extended) IP40 (Waterproof cover)IP65

描述 Description	尺寸 Contour	描述 Description	尺寸 Contour	
Bottom seat of button with lamp Direct Type (LED/Neon) 全电压灯泡 直接插入式灯座	GXB2-EV6 (without push-shaft) 无推杆 GXB2-EW06 (with push-shaft) 有推杆	Bottom seat of button with lamp Direct Type (LED/Neon) 全电压灯泡 直接插入式灯座	(Without contact block) 无触点模块 GXB2-EW6 (With contact block) 带触点模块	
Bottom seat of button with lamp Direct Type (LED/Neon) 全电压灯泡 直接插入式灯座	GXB2-BV6 (without push-shaft) 无推杆 GXB2-BW06 (with push-shaft) 有推杆	Bottom seat of button with lamp Direct Type (LED/Neon) 全电压灯泡 直接插入式灯座	(Without contact block) 无触点模块 GXB2-BW6 (With contact block) 带触点模块	
Description(描述)	Contact(触点)	Type(型号)	Color(颜色)	Contour(尺寸)
Contact Block 触点模块	NO 3 4	GXB2-BE101	●	
Contact Block 触点模块	NC 1 2	GXB2-BE102	●	
Contact Block and Holder(Metal) 触点模块 加中座(金属)	NO 13 14	GXB2-BZ101	●	
Contact Block and Holder(Metal) 触点模块 加中座(金属)	NO + 13 14 NO 13 14	GXB2-BZ103	●	
Contact Block and Holder(Metal) 触点模块 加中座(金属)	NO 13 14 + 21 22	GXB2-BZ105	●	
Contact Block and Holder(Metal) 触点模块 加中座(金属)	NC 21 22 + 21 22	GXB2-BZ104	●	
Contact Block and Holder(Metal) 触点模块 加中座(金属)	NC 21 22	GXB2-BZ102	●	
Contact Block and Holder(Plastic) 触点模块 加中座(塑料)	NO 13 14	GXB2-EZ101	●	
Contact Block and Holder(Plastic) 触点模块 加中座(塑料)	NO + 13 14 NO 13 14	GXB2-EZ103	●	
Contact Block and Holder(Plastic) 触点模块 加中座(塑料)	NO 13 14 + 21 22	GXB2-EZ105	●	
Contact Block and Holder(Plastic) 触点模块 加中座(塑料)	NC 21 22 + 21 22	GXB2-EZ104	●	
Contact Block and Holder(Plastic) 触点模块 加中座(塑料)	NC 21 22	GXB2-EZ102	●	

GXB2/GXB4按钮系列
GXB2/GXB4 push button series

GXB2/GXB4按钮系列
GXB2/GXB4 push button series